

UnderWater Camera Fish Finder

Instructions For Use



Thank you for purchasing our products
Please read the IFU carefully before using this product

Contents

| | |
|---------------------------------|----|
| Safety Notes | 1 |
| 1. Product Function | 2 |
| 2. Monitor Specifications | 2 |
| 3. Camera Specifications | 2 |
| 4. Charging Method | 3 |
| 5. Monitor View | 3 |
| 6. Interface Description | 5 |
| 7. Product Packaging | 9 |
| 8. Camera Assembly | 10 |
| 9. Product Warranty card | 10 |

Safety Notes

1. Please read the user manual carefully before use.
2. Please do not repair the equipment privately, if there is a failure, please contact the manufacturer to return to the factory for repair.
3. Please fully charge the battery before use.
4. If the product is upgraded, there may be certain differences between the instruction manual and the product.

Note: This product is in the underwater environment debugging focal length and related parameters, please use in the underwater environment; If you use it in a non-underwater environment, the camera effect is not good, this is normal, please use it with confidence.

1. Product Function

| | | |
|--------------------------------------|--|---|
| Photo HD 1000TVL | Video HD 1000TVL | Zoom Level 0-5 |
| White LED Light Level 0-5 | Infrared LED Light Level 0-5 | Fish Alarm Level 0-4 |
| Temperature Display 0.01°C | Depth Display 0.01m | Portable Secured to the wrist |

2. Monitor Specifications

| No | Content | Parameter |
|----|----------------|--|
| 1 | Model | YYF005 |
| 2 | Display Size | 5-inch IPS |
| 3 | Resolution | 800×480 |
| 4 | Language | English, Deutsch, Russian, Chinese, Japanese, Arabic |
| 5 | Power Supply | DC 5V, TYPE-C |
| 6 | Battery Inside | 4000mAh 7.4V Lithium Battery, Use time 6 hours |
| 7 | Memory Card | 8GB TF Card |

3. Camera Specifications

| No | Content | Parameter |
|----|-------------------|------------------------------------|
| 1 | Lens | Color CMOS Sensor |
| 2 | Photo | HD 1000TVL |
| 3 | Video | HD 1000TVL |
| 4 | Visible Angle | 130 degree wide angle |
| 5 | Visible Distance | 0.2-3m |
| 6 | Light | 4Pcs Infrared LED + 2Pcs White LED |
| 7 | Waterproof | IP68 |
| 8 | Anti-tensile Wire | 30m, Max 25kg |
| 9 | Working Temp | -20—60°C |
| 10 | Storage Temp | -30—70°C |

4. Charging Method

1. Please use the USB TYPE-C charging cable provided with this product to connect to the 5V power adapter or 5V power bank for charging.

2. During charging, the indicator light shows red.

3. When charging is complete, the indicator shows green.

Note: It is forbidden to disassemble, puncture, impact, squeeze, or put the battery into the fire, it is forbidden to expose the battery to high temperature conditions such as sunlight and open flame, if the battery is bulging and leaking, do not continue to use.

5. Monitor View


5.1 Front View







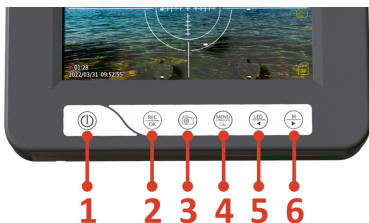

5.2 Bottom View



5.3 Button View



| | |
|---|--|
| 1  | Power button Long press for 4 seconds to power on Short press to power off. |
| 2  | Recording / OK button Press to record video, press it again to exit. Long press to access video file. In menu interface, used as 'OK' button. In time Settings interface, used as decrease. |
| 3  | Camera button Press to take photo. Long press to access picture file. In time Settings interface, used as increase. |
| 4  | Menu / Zoom button Press to access zoom in level 0-5 Long press to access menu, short press again to return. |
| 5  | White LED / left button Camera's white LED light control in level 0-5. In menu interface, move leftwards. |
| 6  | Infrared LED / right button Camera's infrared LED light control in level 0-5. In menu interface, move rightwards. |

6. Interface Description

6.1 Camera Interface



Power Display

Charging



Infrared LED Light (level 0-5)



Fish Alarm (level 0-4)



Zoom (level 0-5)



White LED Light (level 0-5)



Reading

Not insert


Abnormal

Camera

6.2 Main-menu Interface


Long press MENU button to access the main-menu, short press again to return.

In main-menu interface, user can enter the sub-interface.

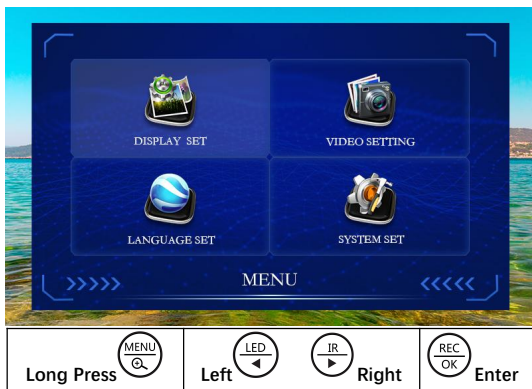


6.3 Display-Set Interface

In display-set interface, user can adjust display parameters.

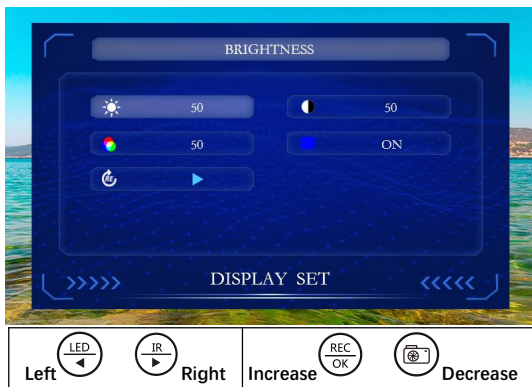

6.4 Video-Set Interface

 In video-set interface, user can adjust video parameters.

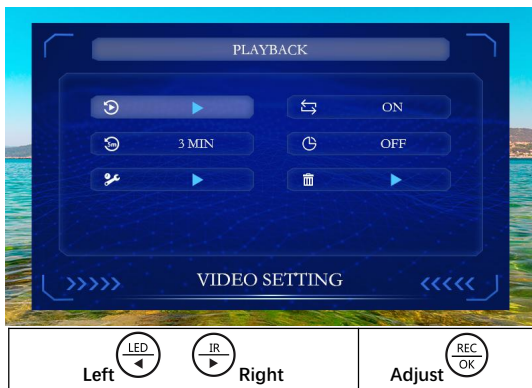


6.5 Language-Set Interface

In language-set interface, user can select language.




6.6 System-Set Interface

 In System-set interface, fish alarm, LED light control, Zoom can be adjusted.

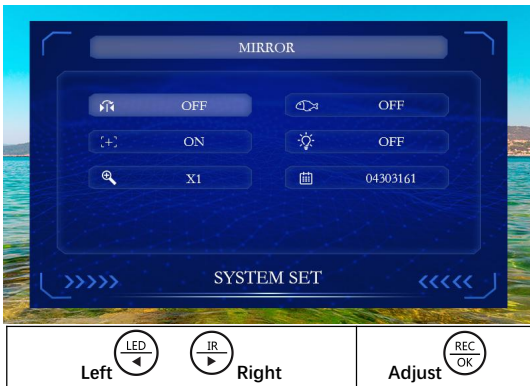


6.7 Picture File & Video File

Long press  to access picture file.

Long press  to access video file.



User can also select 'playback' in the Video-Set interface to access video file.

Deletion: Select the video or picture to be deleted, long press , when the confirmation interface shows, press the  button to delete it.

7. Product Packaging

| | | |
|--|--|--|
|  <p>Fish Finder</p> |  <p>Monitor</p> | |
|  <p>30m Anti-tensile Wire</p> |  <p>Camera (4Pcs Infrared + 2Pcs White)</p> | |
|  <p>Wrist Elastics (6*36cm)</p> |  <p>Bracket</p> |  <p>Fish Floating</p> |
|  <p>Charger 5V 2A</p> |  <p>Cable TYPE-C</p> |  <p>TF Card 8GB</p> |
|  <p>Hook A</p> |  <p>Hook B</p> |  <p>Hook C</p> |

8. Camera Assembly

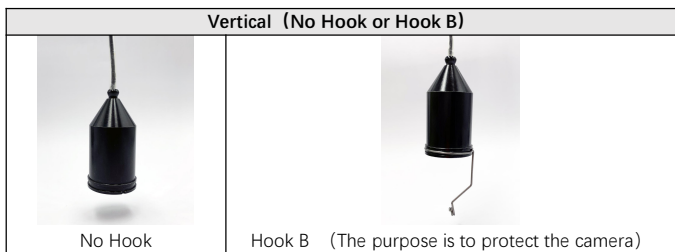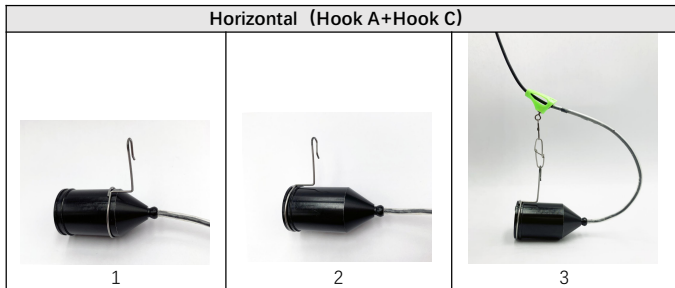

9. Product Warranty card

| |
|---------------------|
| Name: |
| Tel: |
| Address: |
| Purchase Date: |
| Dealer Information: |
| Fault description: |

